

Network Analyzer for Low-, Medium- and High-Voltage Networks

Model PQ-Box 100

- Fault detection
- Evaluation of voltage quality according to EN50160 and IEC61000-2-2 (2-4)
- Fault recorder functions
- Load analyses; energy measurements
- Ripple control signal analysis
- **Ripple control frequency measurements**

1. Application

The PQ-100 Box is a high-performance, portable network-analyzer, power meter and transient recorder. User-friendliness was one of the main objectives of the device development.

The PQ-100 Box has been developed for mobile operation (degree of protection IP65); it is applicable for measurements in public networks (CAT IV) as well as for measurements in industrial environment up to 690V measurement voltage.

The PQ-Box 100 meets 100% of the demands of the IEC 61000-4-30 for a class-A device:

Parameters	Class
Accuracy of voltage measurement	А
Determination of time intervals	А
Marking of measured values at events	A
Harmonics, interharmonics	А
Flicker	А
Frequency	A
Voltage asymmetry	A
Event recording	А
Time synchronization	А

Its compact dimension enables the device to be installed in small-sized spaces and switchgear cabinets, even directly next to current-carrying components. The device is very easy to handle, due to the power supply via measuring lines and the applicationoriented presetting of all trigger conditions.



In order to quickly identify the cause of a grid disturbance, the PQ-Box 100 is equipped with a large number of trigger options.

An USB 2.0 interface is available for a quick data transfer.

In the case of a supply interruption the integrated UPS continues the operation.

2. Measurement functions

The PQ-100 Box is available in different versions:

PQ-Box 100 basic (B0)

The device is suitable for power analyses, as a data logger for the fault detection and for online-measurements.

PQ-Box 100 light (B1)

This version is additionally equipped with a manual trigger for oscilloscope images and 10ms r.m.s. values; standard evaluations according to EN50160, IEC61000-2-2/2-4 for public and industrial power systems are automatically generated.

PQ-Box 100 expert (B2)

In addition to the version "light" this option features comprehensive trigger functions. Fast oscilloscope images and 10ms r.m.s. values are recorded independently.

Option "Ripple control signals" (R1)

Using this function, triggering to ripple control signaling in the network is possible. These signals can be evaluated by means of software as fast r.m.s. values for voltages and currents.

Each version can easily be upgraded via a licence.

The PQ-Box 100 registers more than 2.250 different measurement values in one continuous recording: voltage, current, frequency, power, energy consumption, asymmetry, flicker, harmonics and interharmonics.

The measuring interval for the permanent recording can be set to a minimum of one second, without reduction of the number of parameters recorded.

Performance			
PQ-Box 100	basic (B0)	light (B1)	expert (B2)
Statistic EN50160/IEC 61000-2-2/IEC 61000-2-4	х	x	х
PQ-events	х	x	х
Recording free interval (1sec30min):			
Voltage: min. max. average	x	х	х
Current: min. max. average	x	х	х
Power: P, Q, S, PF, cos phi, sin phi, tan phi	x	х	х
Distortion power D	x	х	х
Energy: P, Q, P+, P-, Q+, Q-	x	х	х
Flicker according IEC61000-4-15 (2010) (Pst, Plt,Ps5)	x	х	х
Unbalanced voltage, current	x	х	х
Voltage harmonics		till 50.	till 50.
Current harmonics		till 50.	till 50.
Phase-angle of current harmonics		till 50.	till 50.
THD voltage, current; PWHD, PHC	x	х	х
Interharmonics – voltage, current		DC till 5kHz	DC till 5kHz
Ripple control signal		х	х
Frequency: min. max. average	x	x	x
10/15/30 min interval – Voltage, P, Q, S, D, cos phi, sin phi	x	x	x
Online mode:			
Oscilloscope recorder	x	х	х
10 ms r.m.s recorder	x	х	х
Voltage, current harmonics	x	х	х
Interharmonics (U, I)	x	х	х
Direction of harmonics	x	х	х
Triggerfunctions			
Manual trigger		x	х
10 ms recorder (U, I, P, Q, S, frequency)			х
Oscilloscope recorder (U, I)			х
Option ripple signal voltage recorder – possible	x	x	x



3. Design

The rugged mechanical design and the class of protection IP65, as well as the lack of rotating parts such as fans or hard discs, make the device suitable for the use even under severe operating conditions.

The PQ-Box 100 is equipped with a data memory of 2GB. Therefore, measured values can be stored for a long time, even up to one year. In case of power failure an internal UPS substitutes the power supply unit of the net analyzer.

A power outlet is not necessary for the voltage supply; the device can be supplied directly from the measurement cables. With a theft protection the PQ-Box 100 can be secured on site.

3.1 Evaluating measured data

Recorded data is transferred to the analyzing-PC via a high-speed USB interface. During readout the device doesn't need additional power supply; it is supplied via the USB interface. The practice-oriented analysis software is included in delivery and can be installed on any number of PCs.

The software provides a wide range of analysis options such as load analyses or the detection of the cause of a grid disturbance. Reports according to EN50160/IEC61000-2-2 (2-4) are automatically generated and comprehensive online-functions are available.

Updates of the analysis software can be downloaded via Internet free of charge (www.a-ebere.de).

3.2 Device front panel



3.3 Display

The display of the device provides information about the correct connection of measuring cables and current clamps and indicates online-data of voltage, current, THD and power.

The number of occurred events, as well as the recorded time period are shown on the display.

Rec. = OFF free Memory:	0d 00:00:00 487MB
Dscilloscope Re	c. O O
RMS Recorder Signal voltage	Ŭ
PQ events	0

A keyboard lock can be activated, to avoid manipulation on the device by unauthorized persons.

Rec. = Of		
free Memory	: 487MB	
U1N 0.027 V	I1 0.000 A	
U2N 0.031 V	12 0.000 A	
U3N 0.029 V		00:00:00 b0
	free Memory:	487MB
	_	+0.000 U0D
		+0.000 VAR
		+0.000 VAR
Rec. = Of	F Od 00:00:00	+0.000 VAR
free Memory		+0.000 VAR
Oscilloscope	Rec. O	
RMS Recorde	r 0	
RMS Recorde Signal voltag		Od 00:00:00
		0d 00:00:00 487MB
Signal voltag	Rec. = OFF free Memory:	487MB
Signal voltag	Rec. = OFF free Memory: S1 0.000 VA PI	487MB 1.000 %
Signal voltag	Rec. = OFF free Memory:	487MB 1.000 % 1.000 %
Signal voltag	Rec. = OFF free Memory: S1 0.000 VA PI S2 0.000 VA PI S3 0.000 VA PI	487MB 1.000 % 1.000 % 1.000 %
Signal voltag PQ events	Rec. = OFF free Memory: S1 0.000 VA PI S2 0.000 VA PI S3 0.000 VA PI F Od 00:00:00	487MB 1.000 % 1.000 % 1.000 %
Signal voltag PQ events Rec. = Of	Rec. = OFF free Memory: S1 0.000 VA PI S2 0.000 VA PI S3 0.000 VA PI F Od 00:00:00 : 487MB	487MB 1.000 % 1.000 % 1.000 %
Signal voltag PQ events Rec. = Of free Memory	Rec. = OFF free Memory: \$1 0.000 VA PI \$2 0.000 VA PI \$3 0.000 VA PI \$3 0.000 VA PI \$7 0d 00:00000 PI \$7 0d 00:000000 * 487MB \$2 THD 11 0.0000 *	487MB 1.000 % 1.000 % 1.000 %
Signal voltag PQ events Rec. = Of free Memory THD U1 0.000	Rec. = OFF free Memory: \$1 0.000 VA PI \$2 0.000 VA PI \$3 0.000 VA PI \$3 0.000 VA PI \$7 0d 00:000:00 PI \$7 0d 00:0000:00 PI \$2 THD I1 0.000 2 \$2 THD I2 0.000 2	487MB 1.000 % 1.000 % 1.000 %
Signal voltag PQ events Rec. = OF free Memory THD U1 0.000 THD U2 0.000	Rec. = OFF free Memory: \$1 0.000 VA PI \$2 0.000 VA PI \$3 0.000 VA PI \$3 0.000 VA PI \$7 0d 00:000:00 PI \$7 0d 00:0000:00 PI \$2 THD I1 0.000 2 \$2 THD I2 0.000 2	487MB 1.000 % 1.000 % 1.000 %

3.4 Pushbuttons

Using the Start/Stop-button the measurement is started or stopped. Any number of measurements can be recorded consecutively, without reading out the device previously.

The button "manual trigger" enables to image the actual state of a system as oscilloscope picture as well as r.m.s. value recording.

By "scrolling", a number of measurement data is indicated on the display. So the correct connection of the device can be tested.

The button "setup" allows to modify for example, configurations for current- or voltage transformer, the sampling interval or the nominal voltage, directly at the PQ-Box 100.

3.5 Time synchronization

To adjust measurement data of different devices time synchronization is essential. For this purpose, a radio controlled clock for GPS signals is available.




3.6 EN 50160/IEC 61000-2-2 Evaluation

- Overview of the power quality statistic. Bar chart provides automatic summary of relevant metrics.

- Automated reporting in accordance with EN50160 / IEC61000-4-15 / IEC61000-4-7 / IEC61000-2-2 / -2-12 (public networks), IEC61000-2-4 (industrial networks), NRS048, IEEE519, or your own defined limits.

- Company logo in the report and as well as main text fields can be customized.

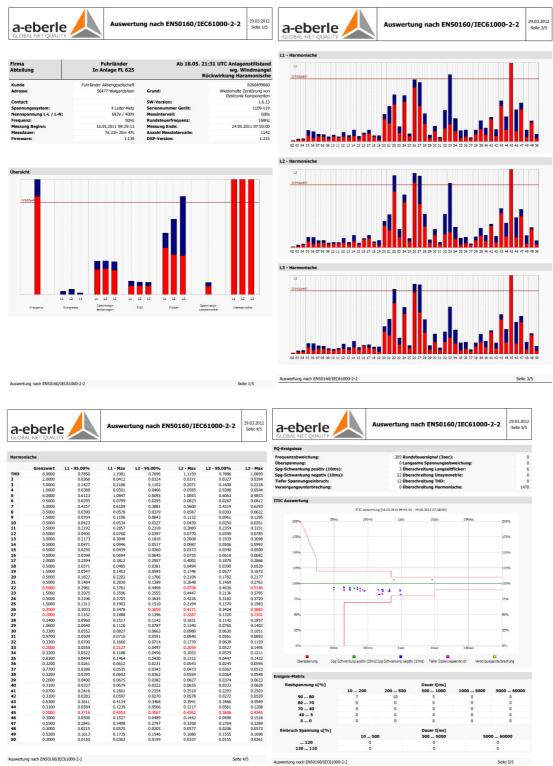

Automatic standard report


3.7 Online analysis-software

A comprehensive online analysis-software depicts the actual waveform of the current- and voltage signals as well as harmonics and interharmonics from DC to 5.000 Hz.


The power flow direction of the harmonics at the measuring point as well as the actual power values (active power, reactive power, distorted reactive power, cos-phi, phase angle, power factor) are displayed.




Online measured-values table

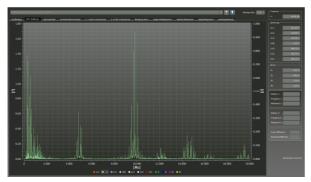


FFT-Analysis DC up to 5 kHz

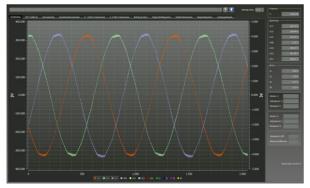

Online oscilloscope-recorder

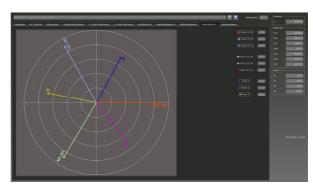


Online phasor diagram

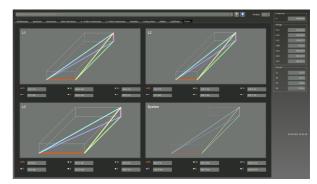

Online power-cube



Online time level diagram

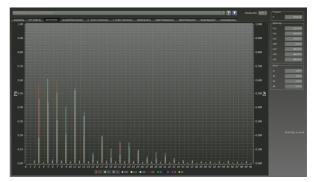


Spectrum voltage and current harmonics



3.8 Analysis of ripple control signals

In addition to the harmonics, the PQ-Box 100 is able to record any frequency between 100Hz and 4700Hz. This feature can be used to evaluate the signal amplitude of ripple control signals.

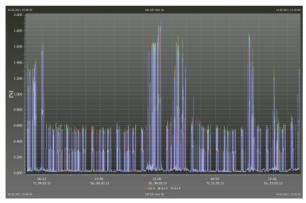

Ripple control level over a few days

Option: analysis of ripple control signals

In addition to the ripple control level measurement (PQ-Box 100 light & expert), using this function it is possible to trigger to a ripple control frequency. The complete message up to 210 seconds for voltages and currents is displayed and disturbances in the signal form can be analyzed. It is possible to record more than 500 telegrams per measurement.

The following parameters can be set:

- Triggering threshold
- Length of recording
- Ripple control frequency
- Bandwidth of the filter curve



Ripple control telegram of voltage and current (option)

3.9 Trigger functions

The version "PQ-Box 100 expert" offers comprehensive trigger functions. Triggering thresholds, length of recording and pre-event history of the record can be freely adjusted by the user. If the automatic trigger is activated, an autonomous intervention to each trigger condition and its adjustment to the actual network condition is made by the device. Therefore, an operating error of the trigger setting is impossible.

Trigger conditions for voltage (phase to phase; phase to neutral; neutral to earth)


- Lower/ upper threshold
- Voltage step
- Wave shape trigger
- Phase angle step

Trigger conditions for current (L1, L2, L3, neutral)

- Lower/ upper threshold
- Current step


3.10 Data memory

The available memory (2GByte) is organized automatically and smart by the device. Numbers of measurements can be recorded consecutively without having rerecorded the data to a PC. At the beginning of a new measurement the free memory is split reasonably for long-time measurement values and recordings.

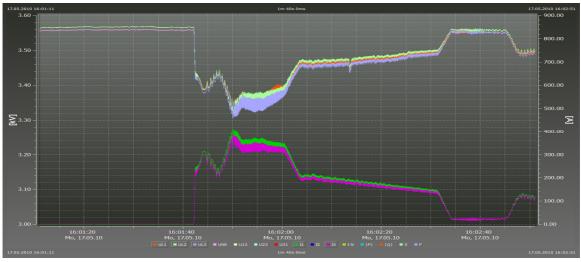



3.11 Fault records as oscilloscope image and 10ms r.m.s. record

10 ms r.m.s. - record (machine start-up)

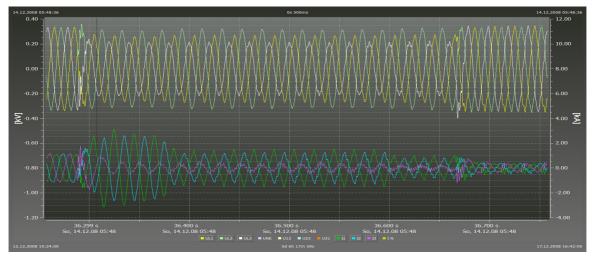

Oscilloscope record



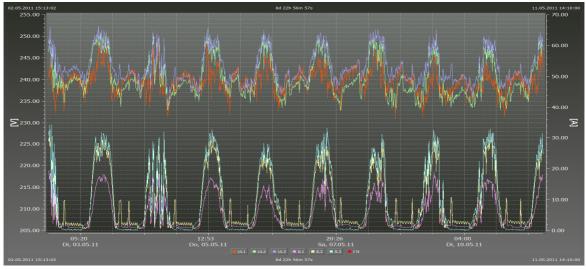

Spannung, Strom 3-phasig



3.12 Version

PQ Box100 (4U/4I)	
4 voltage inputs (AC/DC):	L1, L2, L3, N, E;
Maximum input voltage:	565V AC/800V DC L-N
	980V AC/1380V DC L-L 1 MΩ impedance
4 current inputs (AC/DC):	1000mV input for mini clamp and 330mV for
	Rogowski current probes
	10 kΩ impedance
Sampling rate:	10,24kHz at 50Hz/60Hz
Automatic	
synchronization to fundamental oscillation:	45Hz to 65Hz
Measurement intervals:	freely adjustable from 1 sec.
	to 30 min. + 10/15/30 min.
Data memory:	2 GB
Interfaces:	USB 2.0
Time synchronization:	GPS radio
	controlled clock
Dimensions:	220 x 146 x 55 mm
Mass:	1,7kg
Degree of protection:	IP 65
IEC 61000-4-30:	class A
Accuracy:	< 0,1%
Insulation class:	CAT III / 600V, CAT IV / 300V optionally CAT IV / 600V
Insulation test	Impulse voltage 6 kV
	5sec 5,4 kV rms
	1min 3,6kV rms
A/D converter:	24 Bit
Climate-proofness /	Function: -20°60°C
temperature:	Storage:-30°80°C
Display:	illuminated

PQ Box100 (4U/4I)	
Power supply:	100 V280 V AC or
	140 V240 V DC
USB supply	5V DC over USB port
EMC	
CE- conformity	
Interference	
immunity	
 EN 61326 EN 61000-6-2 	
 Emitted interference 	
 Enlitted interference EN 61326 	
EN 61000-6-4	
ESD	
IEC 61000-4-2	8 kV / 16 kV
- IEC 60 255-22-2	
Electromagnetic fields	
IEC 61000-4-3	10 V/m
- IEC 60 255-22-3	
Burst	
IEC 61000-4-4	4 kV / 2 kV
IEC 60 255-22-4	
Surge	
- IEC 61000-4-5	2 kV / 1 kV
HF conducted	

disturbances – IEC 61000-4-6	10 V, 150 kHz 80 MHz
120 01000-4-0	
Voltage dips	
- IEC 61000-4-11	100 % 1min
 Housing at a distance of 10 m 	30230 MHz, 40 dB 2301000 MHz, 47 dB
 AC supply connection at a distance of 10 m 	0,150,5 MHz, 79 dB 0,55 MHz, 73 dB 530 MHz, 73 dB

4. Current accessories

- Standard accessories are automatically recognized by the meter..

- The conversion factor is automatically adjusted for the connected accessory.

```
    Rogowski current clamp 4~: Ident-No. 111.7001
    Current range: 3000A RMS; Accuracy: 1%
    Rogowski clamp length= 610mm;
    Diameter = 194mm; Rogowski clamp head = 9,9mm
    Frequency range: 10Hz to 20kHz
    Rogowski current clamp 4~: Ident-No. 111.7006
    Current range: 6000A RMS; Accuracy: 1%
    Rogowski clamp length = 910mm;
    Diameter = 290mm; Rogowski clamp head = 9,9mm
    Frequency range: 10Hz to 20kHz
    Mini- Rogowski current clamp 4~: Ident-No. 111.7030
    Current range: 1500A RMS; Accuracy: 1%
    Rogowski clamp length = 400mm;
    Diameter = 125mm; Rogowski clamp head = 8,3mm
    Frequency range: 10Hz to 20kHz
```

The MU-metal clamp is especially applicable for small current measurements on secondary transformers in medium- and high-voltage networks. High accuracy and small angle errors are combined.

Mu-Metal Current clamps 3~: Ident-No. 111.7003
 Current range: 20A
 Frequency range: 40Hz to 20kHz

Mu-Metal Current clamps 4~: Ident-No. 111.7015

Current range: 20A/200A AC RMS (two ranges)

Frequency range: 40Hz to 20kHz

Mu-Metal Current clamps 0...5A 1~: Ident-No. 111.7043

Current range: 5A AC RMS

Frequency range: 40Hz to 20kHz

Free current adapter set necessary

AC/DC Current clamp 1~: Ident-No. 111.7020

AC/DC hall sensor clamp. Set with power supply and 2 pcs. 4mm connectors

Current range 60A/600A (two ranges)

• Current-shunt 2A: Ident-No.: 111.7055

Measurement of AC- and DC-currents. Current range = 2A / 200mV output signal

Free Adapter set for connecting 4 clamps: Ident-No.: 111.7004

Adapter set for connecting 4 clamps or shunt with 4mm connectors

Current clamp cable extension: Ident-No.: 111.7025

Cable extension 5 m for current clamps or Rogowski coils.



5. Order details

When ordering please note:

CHARACTERISTICS	CODE
Fault recorder and network analyzer according to DIN EN 50160 and IEC 61000-3-40 class A	PQ-Box 100
Mobile power-quality-network analyzer and power-meter for low-, medium- and high voltage	
networks according to DIN EN-50160/IEC 61000-4-30 class A	
2 GB flash memory	
 USB interface 	
Display	
IP65; with uninterruptible power supply	
 USB-cable set; Ethernet cable set 	
 Voltage connecting cable 	
2 power supply lines	
5 Dolphin clips	
 3 pcs high current fuses for voltage leads 	
 Hardcase for current clamps and measurement cables incl. analysis software 	
Version	
PQ-Box 100 (4U/4I) basic	BO
PQ-Box 100 (4U/4I) light	B1
PQ-Box 100 (4U/4I) expert	B2
Operating manual and display	
• German	G1
English	G2
French	G3
Spanish	G4
• Italian	G5
Dutch	G6
• Czech	G7
Russian	G8
Polish	G9

UPGRADES						IDENT-NO.
Ausführung						
Upgrade version	"basic"	(BO)	to	"light"	(B1)	900.9090
Upgrade version	"light"	(B1)	to	"expert"	(B2)	900.9091
Upgrade version	"basic"	(BO)	to	"expert"	(B2)	900.9093
Upgrade R0 to R1 (ri	pple control re	corder)				900.9092

ACCESSOIRES	IDENT-NO.
Voltage tap on insulated cable; contact support 1 ~, connected for 35-240mm ²	111.7037
 Cable set 4 phase, 1.5 mm², 2m long, 4x 16A fuse, 4x 4mm safety plugs 	111.7038
Network adapter connector socket for 1 ~; 4mm safety plugs	582.0511
 Calibration set for PQ-Box 100/200; calibration software and adapter box 	111.7039
Lemp rubber case for fuse box	111.7012
 Silex Box, SX-3000GB; USB to TCP-IP converter 	111.9030.43
 Kit of magnetic voltage taps 	111.7008
 GPS radio clock (230V – RS 232) 	111.9024.47
 CAT-Booster (600V CAT IV) voltage adapter for PQ-Box 100 / 200 	111.7026





PQ-Box 100 with accessories and case

A. Eberle GmbH & Co. KG

Frankenstraße 160 D-90461 Nuremberg

Tel.: +49 (0) 911 / 62 81 08-0 Fax: +49 (0) 911 / 62 81 08 99 E-Mail: info@a-eberle.de

http://www.a-eberle.de

Software - Version:

Copyright 2014 by A. Eberle GmbH & Co. KG All rights reserved.